

Quality Aluminum Boat Lifts, INC.
Triple Pull Diagram

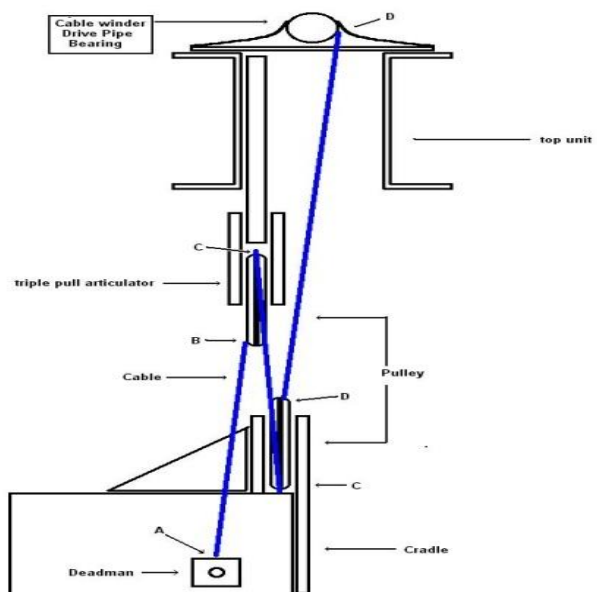


Figure 1

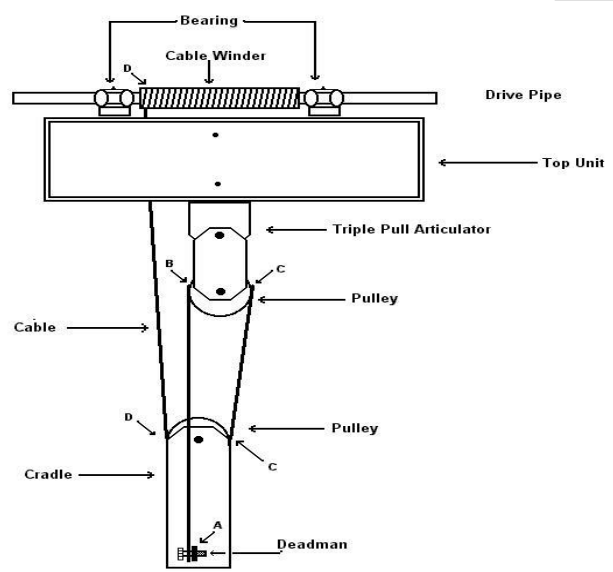


Figure 2

Triple pull set up.

- First is to start the cable through the cradle starting from the the under side of the top lip on the cradle. (fig A)
- Second is to run the cable through the triple pull articulator on the side closest to where the cable will be mounted on the cable winder. (fig B)
- Third run the cable back down and through the pulley on the cradle on the same side as the triple pull articulator. (fig C)
- Fourth bring the cable back up to the cable winder. run cable through the drive pipe far enough to were you are able to put cable clamp onto the cable. (fig D)

Note: The same clamp that is used to secure the cable is the same clamp that you may use to adjust the cable to level the cradles.